



# **MVP 440 Digital Meter**

The MVP 440 Meter accepts data from Sonicu digital sensors, analog sensors (4-20 mA), dry-contact switches, and Modbus to connect equipment, machines, facilities, and systems to the SoniCloud platform, where users access and manage all locations from one convenient dashboard 24/7.

# MVP 440 OVERVIEW

The MVP 440 Meter can receive data from up to four independent sensors simutaneously, for superior flexibility and cost-effectiveness. It can be used with any combination of Sonicu digital sensors, and/or commercially available analog (4-20mA) sensors.

**SMART IoT:** The onboard RS485 input allows the MVP 440 to connect unmonitored equipment, machines, facilities, systems, and many other asset types to the SoniCloud platform. SMART IoT streams data about machine states, conditions, and other variables to the SoniCloud Platform 24/7 for easy user access. SMART API connects SoniCloud data streams to BAS systems. Contact Sonicu for more information about SMART IoT.

SoniCloud Dashboard: Using their phone, tablet, or PC, users can view, manage, and respond to all monitored locations from the dashboard in real time. They can view alarm histories, analyze historical data to identify trends, create compliance reports, and more using Sonicu's SMART Tools. SMART Alerts protect equipment and assets by sending escalating alerts to users by phone, text, or email if power outage, temperature excursion, or other problem occurs.

# **OUR ADVANTAGES**

- Pre-configured monitoring kits are easy to deploy and completely scalable as needs require
- Sensor-to-cloud data transmission (Wi-Fi, 4G/5G LTE, and Ethernet) require no additional hardware
- Sensor-to-mesh-to-cloud data transmission (Ethernet, 4G/5G LTE, primary or failover) use meshing sensor technology and Sonicu MVP Gateways (see link below) to create a reliable, self-healing sensor network.
- Data Sync technology empowers lossless monitoring as on-board memory stores all data during network interruptions, then automatically uploads data to SoniCloud when a connection is restored.
- Standard 12V adapter powers the SMART IoT meter or recharges the internal Li-ion battery used for primary power or backup power supply if power outages occur.

## **LINKS**







Sonicu MVP Gateways

# **APPLICATIONS & INDUSTRIES**

MVP 440 Digital Meters monitor and measure virtually all applications from power and fluid levels to any number of key performance indicators (KPIs) in Industrial/ Manufacturing, Building automation, Healthcare, Research/Laboratories and Food Service.












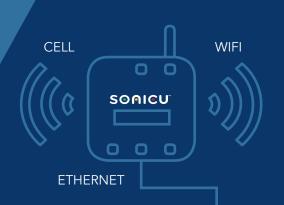



Sonicu provides access, alarming and archiving 24/7/365 via any internet-enabled device.

#### Features

#### **MVP 440 Meter**

Meter with four digital input ports and RS485. Use with Sonicu digital sensors, 4-20mA analog sensors, modbus, or dry-contact. Includes rechargeable battery, micro SD memory for onboard data backup. Multiple local display screen options available.

#### **Specifications**

Sensor Ports

Four ports, each can be configured as one of the following:

Sonicu digital probe

• Contact closure (dry contact)

• 4 to 20 mA

Serial Ports

1 x RS485, half-duplex, 3-wire
(+data, - data, ground); can be
configured as one of the
following:

• Modbus master

• Modbus slave

• Custom protocol (contact us)

Radio Protocols One of the following:

• 4G Cellular

• Wi-Fi 802.11 b/g/n

• 900 MHz (meshing)

**Power Modes** 2600 mAh Li-ion 3.7v rechargeable battery

12v DC wall adapter

**Enterprise Security** Wi-Fi: WPA2;

Cellular: standard encryption to tower, virtual private network to

cloud, completely secure

Operating Temp -10 C to +40 C

**Humidity** 10 to 95% RH, non-condensing

**Construction** ABS plastic housing

**Dimensions** 3.071" x 5.254" x 1.450"

Cables Flat 6-ft, 15-ft and 25-ft

**Mounting**Adhesive or screw mount

Warranty
Warranted for duration of
Data Service Agreement

Any Department. Any Application. One Choice.

# Part numbers

101209

# **Description**

101210 SMART IoT Meter - WiFi

101211 SMART IoT Meter - Cell (4G LTE)

SMART IoT Meter - 900 MHz

### Sonicu Digital Sensors

100234 Glycol Digital

Snap, -55 C to +25 C

100180 Air Digital

Snap, -55 C to +125 C

101212 Humidity and Temperature

Digital, -30 C to +50 C

0% RH to 100% RH

100260 ULT Digital

4" Stainless Sheath, -100 C to 0 C

100261 Cryogenic Digital

15.5" Stainless, -205 C to -105 C

# Accessory Parts

100040 Power Wall Adapter: 12V DC

100274 Flat 6-foot cable
 100280 Flat 15-foot cable
 100281 Flat 25-foot cable

