

## SONICU DASHBOARD ACCESS 24/7



# Vaccine Temperature Monitoring Kits For Health Departments, Physician Clinics, Pharmacy, etc.

Sonicu Vaccine Temperature Monitoring Kits include everything you need to monitor vaccines in refrigerators or freezers 24/7 and comply with CDC/VFC regulations.

### Features include:

- Access live monitoring dashboard 24/7 on any smart phone, tablet or computer
- Configurable temperature alarms ensure vaccine integrity
- Secure, cloud-based platform
- Continuous data logging
- Automatically generated reports
- Optional local display on tablet

### Advantages of a Sonicu Solution

Sonicu's remote wireless monitoring provides superior visibility, eliminates time consuming manual data logging, and automates regulatory compliance reports.


Sonicu hardware is pre-configured, deploys easily, and is modular to scale up or down to match your requirements.

Sonicu includes access for an unlimited number of users, unlimited secure data storage, on-board data backup, free software updates, unlimited technical support, online training videos, and a full warranty on all hardware.



## SNAP Calibration Program



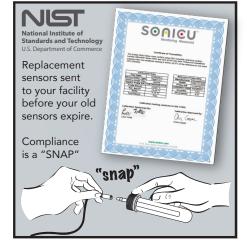



See other side for detailed kit information For assistance email: sales@sonicu.com or call (844) 476-6428 M-F, 8-5 EST

### Vaccine Freezer / Fridge

# Sonicu Vaccine Monitoring Kits for CDC/VFC

### **Kit Components:**



# **Kit Choices – Single Kits monitor 1 refrigerator or freezer. Dual Kits monitor 2 devices.** Select by connectivity option and number of devices requried (add kits as needed)

Connectivity*	Kit No.	Each Kit Includes
WiFi - Single	210000	Sonishield Duo, glycol sensor, 12v DC power/charger, 6' cable, mounting supplies
4G LTE - Single	212000	Sonishield Duo, glycol sensor, 12v DC power/charger, 6' cable, mounting supplies
WiFi - Dual	210001	Sonishield Duo, 2 glycol sensors, 12v DC power/charger, 6' and 15' cable, mounting supplies
4G LTE - Dual	212001	Sonishield Duo, 2 glycol sensors, 12v DC power/charger, 6' and 15' cable, mounting supplies

\*Sonishield Display can be added to any Temperature Monitoring kit with the Part Number 116000 **NOTE:** Call us for -80°C and/or cryogenic monitoring kits.

#### **Meter Specifications**

Meter	Description	Dimensions	Part No.	Description	Range	Accuracy
Sonishield Duo	2 input port	3.87" x 2.51" x 1.2"	100234	glycol sensor	-55°C to +125°C	+/5°C

### **Technical Notes**

- Kits include easy-to-follow installation guides and online training videos. Wireless temperature meters mount quickly, and live customer support is provided to all customers.
- Sonicu sensors come with NIST-traceable, ISO/IEC 17025 compliant calibration certificates. SNAP Calibration eliminates downtime, administrative burden, uncertainty and worry from regulatory required temperature probe calibration.
- Uninterrupted Power Source switches from wall adapter to onboard rechargeable batteries during power outages.
- The secure SoniCloud platform is hosted on Amazon Web Services (AWS).

**NIST Calibrated Sensor** 



- Sensor-to-cloud data transmission requires no additional hardware or software.
- Data-Sync and onboard memory ensure all data is preserved in case of network interruption.
- Automated data logging and reporting eliminate manual data entry and streamline compliance.



844-4SONICU • 317.468.2345 • FAX 317.586.4804 www.sonicu.com info@sonicu.com